

## Clutch Replacement



1, Hold the back nut to release the two bolts and remove the chain cover.



2, Using a drill, remove the four forks holding the transmission.




3, Take off the chain and put it aside when the transmission's removed.



4, To remove the clutch, unscrew the middle bolt and washer (use a screwdriver to hold the clutch so it won't spin), and the clutch will come right off.



5, To put the clutch back in, screw the bolt and washer.

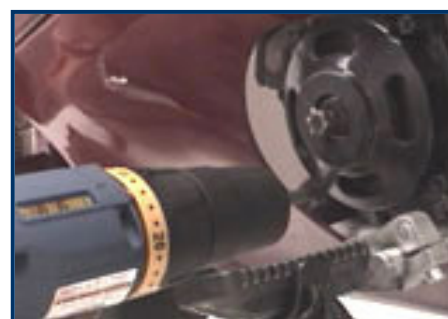

6, Screw the four forks holding the transmission.



7, Put the chain back in place by pushing the tire downward.



8, Screw the two bolts of the chain cover to put it back. After finishing everything, don't forget to refill the engine with oil.