

Front Wheel Removal



1, To remove the front wheel, place bike on center stand. You must first remove the front brake pad and loosen the two bolts on both sides from the disk using an Allen wrench.



2, When the two bolts are unscrewed, release the brake cable.



3, To remove the tire, loosen the nuts on the side




4, Take off the space washer and unscrew the whole bolt through, the tire will come right off.



5, Put back the front wheel and screw the bolts on both sides.



6, To put the brake pad on, slide it in the gap between the disk and the metal hole which holds the big pedal.

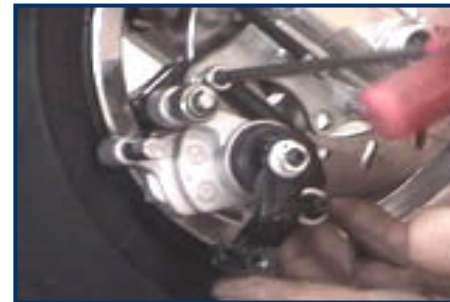

7, Put back the two bolts and tighten it using an Allen wrench. Make sure that the brakes are correctly in place or else the tire won't move.



8, Insert the brake cable and slide it on through the first hole and hook the side with a bolt and slide in the cable in the little hole in the back of the bolt and tighten the bolt so it will be secured.